 
 



**BBK-1 Back Box**  
Stock Number: 1500001  
For use on:  
MBA/PBA bells  
SL-1224WP  
SL-1224WP  
SL-120  
SH-120  
CSH-1224  
CSL-1224

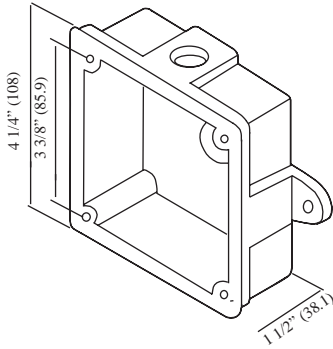


**BBX-1 Back Box**  
Stock Number: 4270024  
For use on:  
MBA/PBA bells  
SL-1224WP  
SL-1224WP  
SL-120  
SH-120  
CSH-1224  
CSL-1224

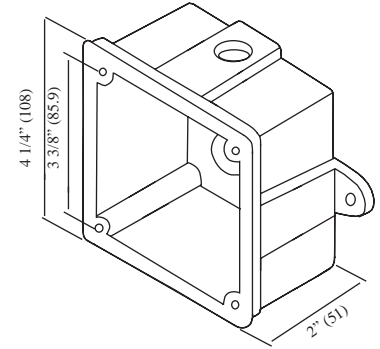

 
**BBX-5 Back Box Weatherproof**  
Stock Number: 4270048 Red, 4270049 White  
For use on:  
SL Series strobe/horns  
SH Series strobe/horns

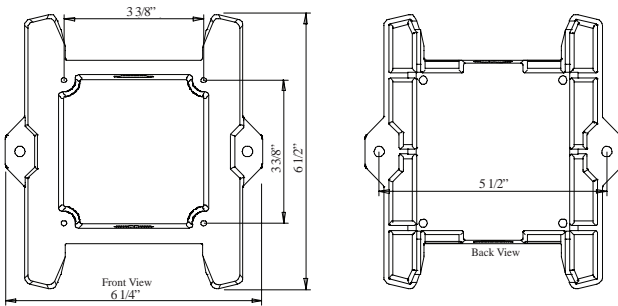



Includes 4 ea.  
#8-32 x 3/4 screws

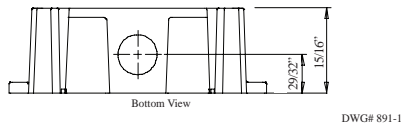 

 **4BX-5 Back Box**  
Stock Number: 4270045 Red, 4270046 White  
For use on:  
SR speakers  
SSR speakers  
SC24 strobes

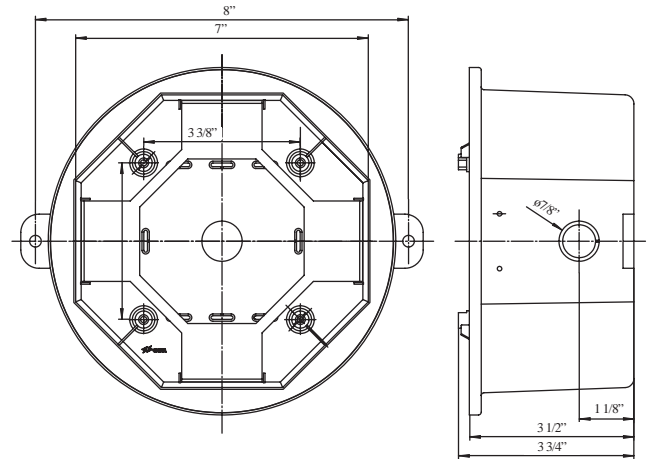

  **4BX-3 Back Box Surface Mount**  
Stock Number: 4270018 Red, 4270019 White  
For use on:  
SS speakers  
SSS speakers

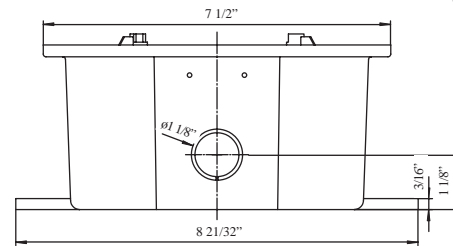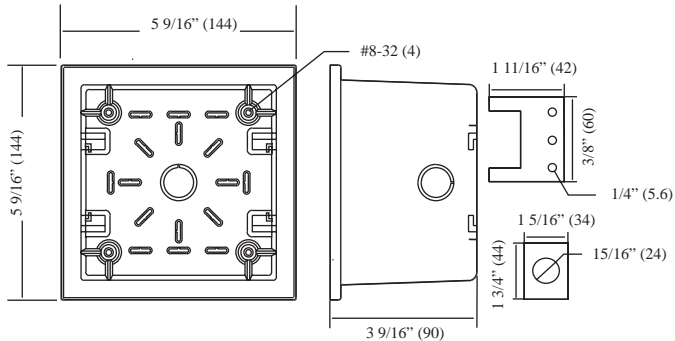


**Double Gang Mounting Plate White**

Stock Number: 4270044

For use on:

 
Any device using a 4" mounting configuration

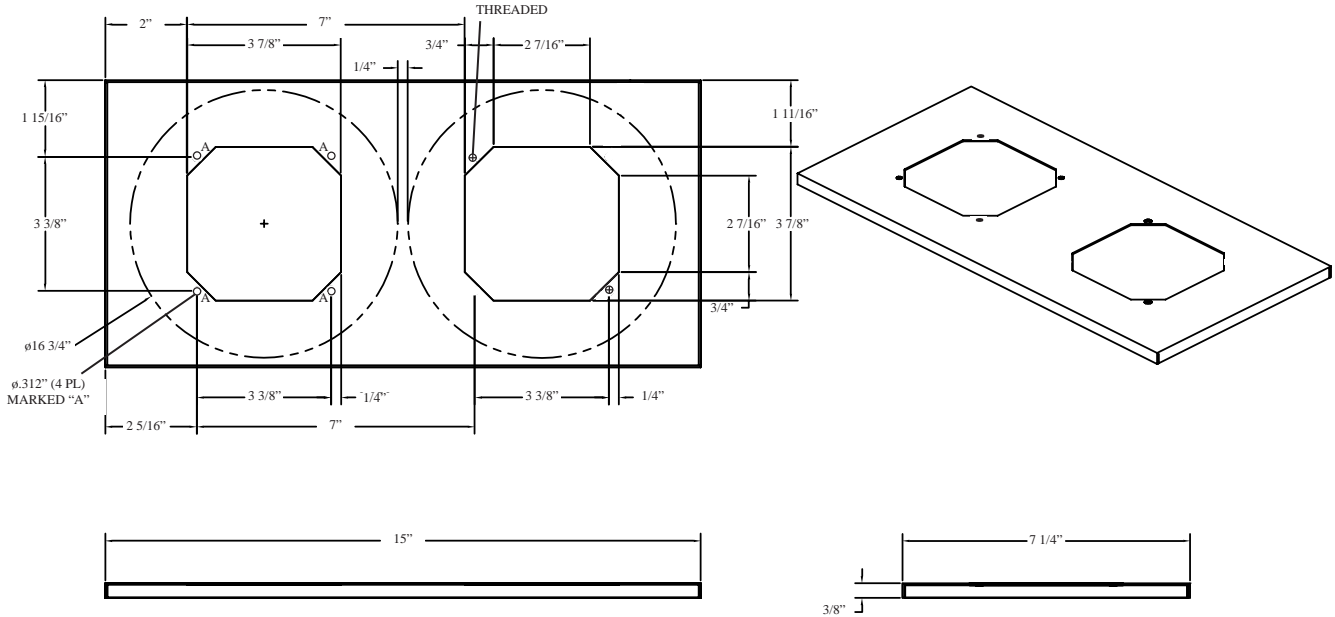

**4SP-MW Mounting Plate**

Stock number: 4270043

 For use on SL-5

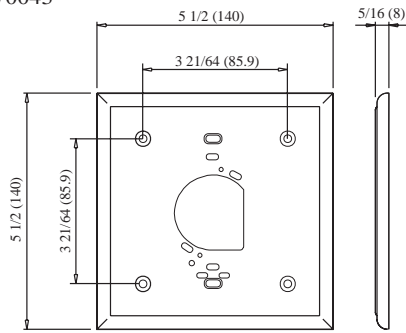


**RBX-1 Trim Skirt**

Stock number: 4270032 Red, 4270033 White

For use on:

 - SH24C
- SL24C
- CSH24C
- CSL24C

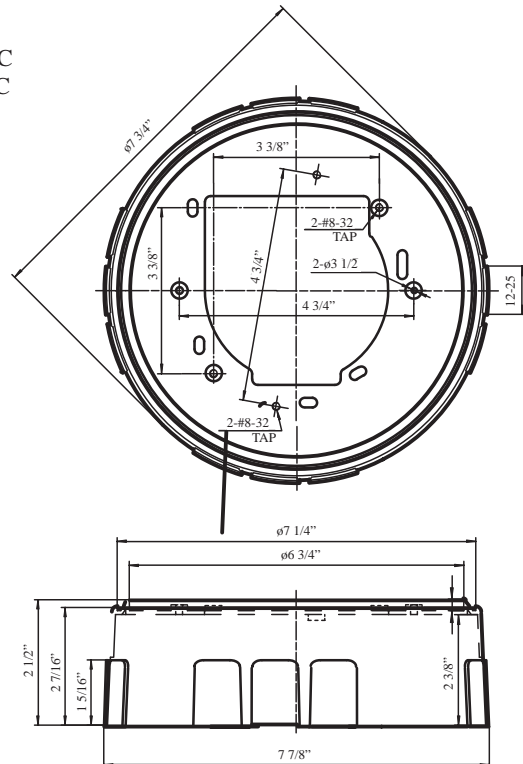

**SPC-1 Mounting Plate**

Stock number: 4270038

For use on:

- SH24C
- SL24C
- CSH24C
- CSL24C

