

Wi-Fi Doorbell Camera

Visit alarm.com/doorbell for installation instructions.

Push Notifications

Use the Alarm.com app to set up instant alerts:



Be notified when the doorbell button is pushed.



Be notified when the Doorbell Camera detects motion.

Tap on a doorbell notification to open the call screen so you can see and speak with your visitors.

QUICK TIP To respond to doorbell notifications even faster, check "Keep me logged in" on the Alarm.com app login screen.

Video Recording Rules

Use the Alarm.com app to choose which events trigger your Doorbell Camera video clip recordings:



Button Pushed

Record when the doorbell button is pushed.



Motion

Record when the Doorbell Camera detects motion.



Event Triggered

Record when a sensor in your Alarm.com system is activated or an alarm is triggered.



You can view recorded clips on the Alarm.com app and Customer Website.

LED REFERENCE GUIDE

Normal Operation

Green | Solid

Ready

Use the Alarm.com app or Customer

Website to choose a custom color in
place of default green.

In Call mode A call has been initiated or is occurring.

Requires Attention



Troubleshooting (must push and hold button to initiate)



QUESTIONS? Contact your installer or visit **www.alarm.com/doorbell** for helpful videos and a full LED Reference Guide. If you are a professional installer, visit **www.alarm.com/supportcenter**.