




### Getting Started:

Keystone Jack w/ IDC Cap,  
Wire Strippers, CAT6A Cable

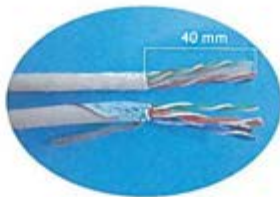

### Step 1:

Strip approximately 40mm of  
the cable jacket, cut off the  
plastic cross, and separate the  
wire into 4 pairs.



### Step 2:

Insert the wires through the  
cap up to wire jacket.



### Step 3:

Lay the wires in the correct  
slots according to the wiring  
diagram on the cap.



### Step 4:

Trim wires with wire cutters  
flush with cap.



### Step 5:

Match the T-shape rib in cap  
with the corresponding cavity  
on IDC and put the cap onto  
IDC.



### Step 6:

Press the cap down to IDC  
and make sure the wires are  
deeper than the tiny teeth in  
IDC slots.



### Step 7:

Close the outer cap by  
pushing down both sides of  
the outer cap until it clicks.



### Step 8:

Tie up the cable and you are  
finished.