



TVBU507

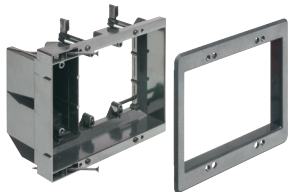

TVBU507BL

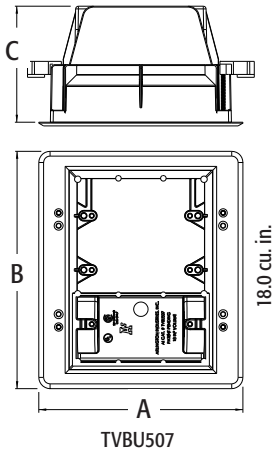

Scan For Video



INCLUDES

Recessed combo box; (1) trim plate; (1) decorator style cover plate; and installation screws.

Multiple Gang Recessed TV BOX™ for Power and Low Voltage

For new or existing construction (TVBR505K for old work only). Non-metallic, recessed combo boxes for power and low voltage for class 2 wiring of satellite or cable TV, speakers, etc.

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	TRADE SIZE	COLOR	VOLTAGE TYPES	UNIT PKG	STD PKG	DIM A	DIM B	DIM C
TVBU505*	09680	2-Gang	White	(1) Power/ (1) LV	1	4	6.942	6.254	3.750
TVBU505BL*	09681	2-Gang	Black	(1) Power/ (1) LV	1	4	6.942	6.254	3.750
TVBU505K*†	09682	Kit, 2-gang	White	(1) Power/ (1) LV	1	4	6.942	6.254	3.750
TVBR505K*	09670	Kit, 2-gang	White	(1) Power/ (1) LV	1	4	6.942	6.254	3.750
TVBU507	09661	3-Gang	White	(1) Power/ (2) LV	1	4	6.818	7.930	3.875
TVBU507BL	09662	3-Gang	Black	(1) Power/ (2) LV	1	4	6.818	7.930	3.875

UL PATENTED.
E170558 **MADE IN USA.**

Add suffix "GC" to Catalog # when ordering in Canada to include grounding clip, for example TVBU505GC. *Optional box covers available on page Q-3. † Includes brush style cable entry device.

FEATURES AND BENEFITS

- Recessed combo box allows you to mount LCD/plasma TVs and other system components flush against the wall
- For new work. Use supplied screws to install on stud. For convenience, box positioning tabs are set for 1/2" or 5/8" drywall
- Trim plate is textured/paintable and covers edges of cut wall surface
- Mounting wings hold bracket securely against wall when screws are tightened
- For walls up to 1-1/2" thick
- Use with Arlington's SCOOP™ series entrance hoods and plates (see pages O-7 to O-9)




TVBR505K KIT

Includes: Recessed combo box; (1) tamper resistant duplex receptacle; (1) CEDH1 & (1) CED130; and (1) wall plate.



PHOTO B-SCREWS

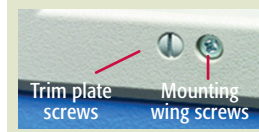

INSTALLATION INSTRUCTIONS

NEW WORK (TVBU505 SHOWN)



Attach box to stud. Use tabs for proper positioning of box depth. See [step 2](#).



Positioning tabs are set for 1/2" or 5/8" drywall.




Attach paintable trim plate with screws provided. See [Photo B](#).



Tighten mounting wing screws to pull the box securely against the wall board. See [Photo B](#).

RETROFIT WORK (TVBU505 SHOWN)

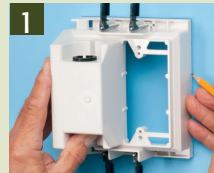

Using box, without trim plate as a template, mark location. Cut hole.



Attach trim plate to box. See [Photo B](#). Pull wire/cables. Install box assembly in opening.



Tighten mounting wing screws to pull the box securely against the wall board. See [Photo B](#).



TVBU505 with power in one side; low voltage in the other. CED13 (page O-7) used to secure wall plate to box.